



MEASURING GUIDES

These Diagrams will help you to measure your windows for Midnight Anytime Blackout Blinds. These guides show precisely where to measure, for the best possible fit. If you still need help, just contact us.

What you'll need to measure

Takes less than 5 mins to complete.



1-2 People



Step Ladder



Measuring tape
(metal works the best)



Pen & Paper

Reveal Fit

Step 1: Check the reveal depth of the window


Before measuring, make sure your window has enough space for the blind, pelmet, and side tracks to fit properly inside the reveal.

Ideal clearances are:

- 70mm depth at the top (watch for mullions)
- 30mm clearance along both sides at the front
- 20mm clearance at the front edge

Measure the width in three spots — top, middle, and bottom — and note the smallest. This helps us allow for any slight variations.

Look out for obstructions like handles or uneven surfaces. If you're unsure, send us a quick photo and we'll take a look.

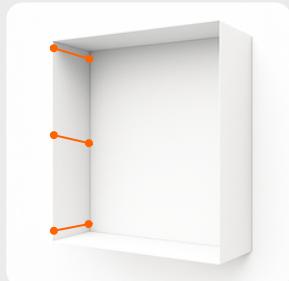

Step 2: Check the width of the window

Measure the internal width of your window from side to side, inside the reveal. Take three measurements — one at the top, one in the middle, and one at the bottom.

The top measurement is the most important, as that's where the blind sits. Still, all three are needed to check for squareness. If there's more than a 10mm difference between them, let us know.

Take all measurements along the front edge of the reveal, as this is where the blind will be fitted. Always measure against the solid frame, not rubber seals or trim.


Step 3: Check the height of the window

Measure the internal height from the top of the reveal to the bottom.

Take three measurements — left, centre, and right.

We need all three measurements. We'll use the longest to make sure the side tracks aren't too short and to check for any major variation.

Measure from the very top inside edge to the bottom ledge inside the reveal. Avoid including skirting or trim outside the frame.

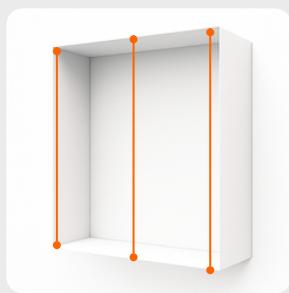

Make note of any obstructions:

There should be at least 20mm clearance from the front of the reveal space.



Winders



Locks



Latches



Handles



Skirting Board



Vertical Mullion



Made for you.

Hints and Tips for Measuring Like a Pro

Want to get it right the first time? Here are a few quick tips to help you measure with confidence.

- Label your measurements clearly with width and height so they don't get mixed up later.
- Only send us the exact numbers we ask for — no need to make any adjustments. We custom-make your blinds to suit.
- For recess-fit blinds, we'll take care of the small deductions needed for a perfect fit. The fabric width will be slightly narrower to allow room for the hardware.
- For face-fit roller blinds, we make them to your exact measurement. If there's a wall, tile, or trim close to the frame, check with us first before ordering.
- Measure every window, even if they look the same. Small differences can make a big impact on the final fit.
- If you're unsure, just ask. You can even send us a photo of your window and we'll guide you through it.

1300 622 546

sales@midnightanytimeblinds.com.au

midnightanytimeblinds.com.au